


rub-down
transfers

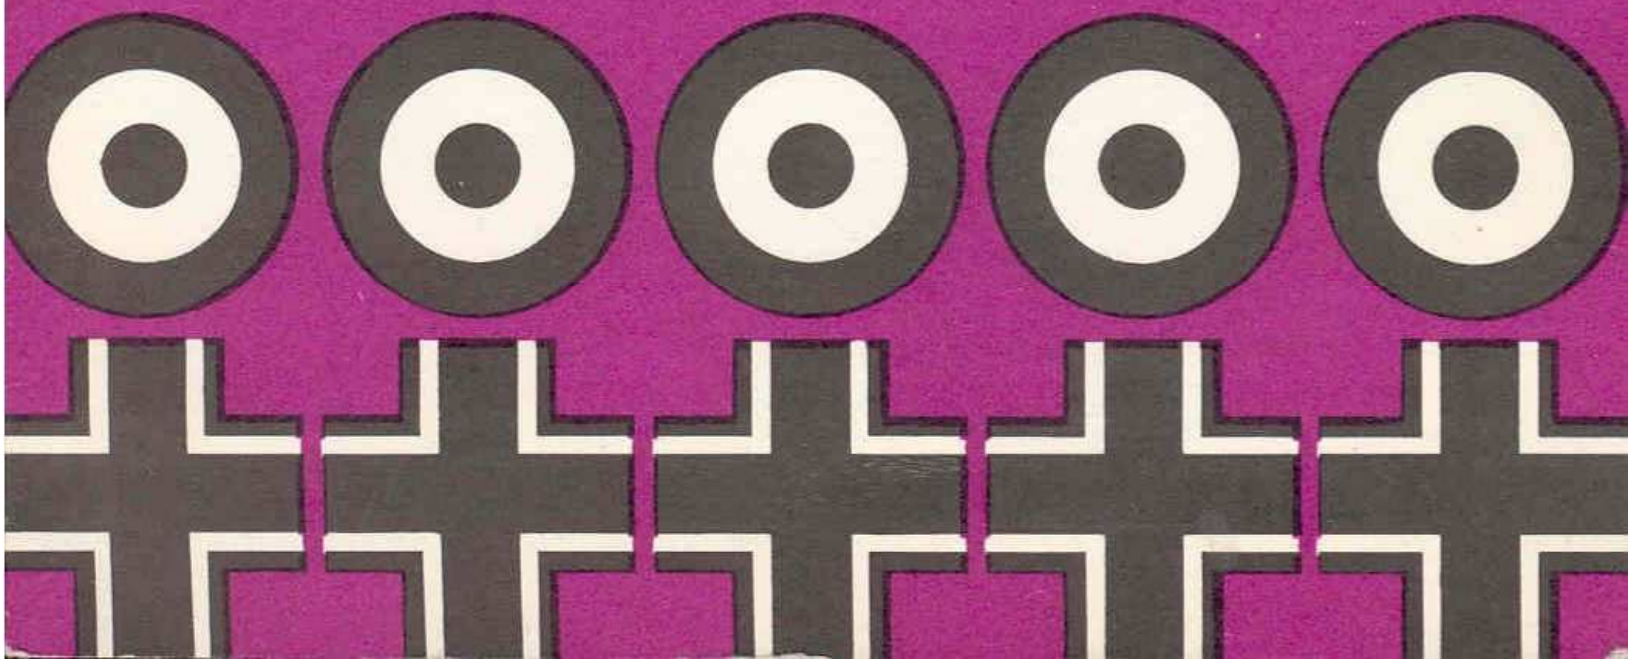

AIRCRAFT

BLICK dry print



...for a professional finish

These remarkable rub-down decals can be applied over any rivet detail or panel line and give a painted on, professional look to the finished aircraft.

DIRECTIONS

Method A

- (1) Before removing the decals from the backing sheet carefully rub across the entire symbol to be transferred with a soft pencil or ball point pen.
- (2) Cut decal from sheet, place in position and apply finger pressure, gently at first, making sure the decal is in the correct position, then apply firm pressure to release the decal from the carrier film.
- (3) Place backing sheet over rubbed down decal and apply further pressure to ensure that the symbol is firmly in position.

Method B

- (1) Remove sheet of decals from backing sheet.
- (2) Cut selected decals from sheet leaving as generous a surround as possible.
- (3) Place accurately in position on model aircraft.
- (4) Rub over decal with a ball point pen or soft pencil.
- (5) Peel off carrier film.
- (6) Place backing sheet over rubbed down decal and apply pressure to ensure that marking is firmly in position.

NOTE: If decal is damaged in application it can be removed by applying self adhesive tape over it and peeling off. The damaged decal will adhere to the tape.

Listed below are the sheet numbers and descriptions now available.

Sheet No. M1

Luftwaffe Squadron Code Letters and Numbers 1939-45. Black.

Sheet No. M2

Luftwaffe Squadron Code Letters and Numbers 1939-45. White.

Sheet No. M3

Luftwaffe Swastikas 1939-45.

Sheet No. M4

Luftwaffe Underwing and Fuselage Crosses 1939-45.

Sheet No. M5

Luftwaffe Underwing and Fuselage Crosses 1939-45 (Simplified Design)

Sheet No. M6

Luftwaffe Upper Wing Crosses 1939-45.

Sheet No. M7

Luftwaffe Upper Wing Crosses 1939-45 (Simplified Design)

Sheet No. M8

Luftwaffe Markings 1939-45. Rank and Squadron Markings. Kill Markings. Squadron Insignias.

Sheet No. M9

Royal Air Force Upper Wing and Fuselage 'B' type Roundels 1923-47.

Sheet No. M10

Royal Air Force Fuselage 'C' 1 type Roundels, 'C' type Roundels for Underwing and Fin Flashes 1942-47.

Sheet No. M11

Royal Air Force 'A' 1 type Roundels 1937-42, 'A' type Roundels 1915-42 and Fin Flashes December 1940 to 1942.

Sheet No. M12

Royal Air Force Prototype, Kill and Squadron Markings 1939-45.

Sheet No. M13 (DARK RED)

Royal Air Force Squadron Code Letters and Serial Markings 1939-45.

Sheet No. M14 (RED AND LIGHT GREY)

Royal Air Force Squadron Code Letters 1939-45.

Sheet No. M15 (SKY TYPE 'S', LIGHT GREY)

Royal Air Force Squadron Code Letters 1939-45.

Sheet No. M16 (BLACK)

Royal Air Force Squadron Code Letters and Serial Markings 1939-45.

Sheet No. M.17

Italian Air Force Upper and Lower Wing Fasces (1938-43).

Sheet No. M.18

Italian Air Force Squadriglia, Stormo, Gruppo Markings (1938-43).

Sheet No. M.19

Italian Air Force Code Numbers and Letters, Red (1938-43).

Sheet No. M.20

Luftwaffe Code Numbers and Letters, Red (1939-45).

Sheet No. M.21

U.S. Air Force Code Numbers and Letters, Black (1941-45).

Sheet No. M.22

U.S. Air Force National Insignia. Pre-war and early war.

Sheet No. M.23

U.S. Air Force Individual Markings for P47 and P51. 1:48 scale.

Sheet No. M.24

U.S. Air Force Individual Markings for P47, P51 and P38. 1:72 scale.

Look out for other items in the **BLICK DRY PRINT** range in your local model shop or stationers.



BOE 59 Gothic and Roman letters and stripes.
 Lettering in 1/16th and 1/8th sizes.
 Stripes in 1/64th, 1/32nd and 3/64th widths.
 Available in Black, White, Red, Yellow, Orange and Gold.



BOE 60 Numbers and Stripes
 Slot car numbers in 1/24th and 1/32nd scale. Stripes in 1/16th and 1/8th widths. Available in Black, White, Red, Yellow, Orange and Gold.



In addition to the two sheets illustrated above, the **Blick Dry Print** range includes a wide assortment of letters and numbers in black, white and gold.