

Doporučené barvy

Recommended Colours

	F.S.	Humbrol	Gunze Sangyo	Model Master Enamel	Agama
A Cream RLM 05	3618				
B Grey RLM 02	6132	H 31			N6M
C Black Green RLM 70	4050	H 91	65		N1M
D Red RLM 23	1140	H 60	13		N30M
E White RLM 21	7886	H 34	11	1768	01M
F Black RLM 22	7038	H 33	12	1749	07M
G Rust		H 113			29
H Coal Black		H 85		1597	36M
I Leather		H 62			30M

NOTE: This above list references to Federal Standard /FS 595A / numbers do not include the prefix number. This just denotes the sheen of the colour e.g. 1= Gloss, 2= Semi-gloss, 3= Matt.

Návod na aplikaci vodou snímatelných obtisků / How to apply Decals


- Vystříhnete pečlivě požadovaný objekt z obtiskového aršíku.
- Namáčejte asi 10 vteřin ve vlažné vodě, až podkladový papír nasaje dostatečně vodu.
- Položte navlhčený obtisk na nesavý podklad a nechte působit asi 1 minutu, až se uvolní lepidlo a obtiskem lze po podkladovém papíru lehce posouvat.
- Umístíte obtisk i s podkladovým papírem na požadované místo na modelu. Přidržte obtisk pinzetou a opatrně z pod něho vytáhněte podkladový papír. Pokud se Vám nepodařilo umístit obtisk přesně na požadované místo, naneste kolem okraje obtisku štětcem trochu vody. Voda zavzlíná pod obtisk a můžete pak jemně pinzetou upravit polohu obtisku na modelu.
- Je-li obtisk na požadovaném místě, pak ho opatrně přitiskněte jemným hadříkem tak, abyste vytlačili všechnu vodu a případné vzduchové bubliny.
- Pro sjednocení povrchu modelu a zamezení případného pozdějšího odlepování obtisků je vhodné celý povrch modelu přelakovat vhodným průhledným lakem.

- Cut the particular image carefully off the sheet.
- Soak it in lukewarm water for 10 seconds.
- Put the wet image on some non-blotting surface.
- Place the image still on the base paper to the model. Hold the image with tweezers and remove the paper carefully. If the image is placed incorrectly, add some water to the image border using a brush. The image position can then be corrected.
- If the image is placed correctly, press it with soft cloth to eliminate excess water and air bubbles.
- Allow the decal to dry well.
- We recommend to coat the model surface with your favourite varnish to achieve a uniform finish. It also helps to keep the decals in place.



www.aml.cz
E-mail: aml@aml.cz
aml@proactive.cz

Lazar Miroslav
Ke Studánce 1048
735 14 Orlová-Lutyne
Czech Republic
© AML 2004 Czech Republic

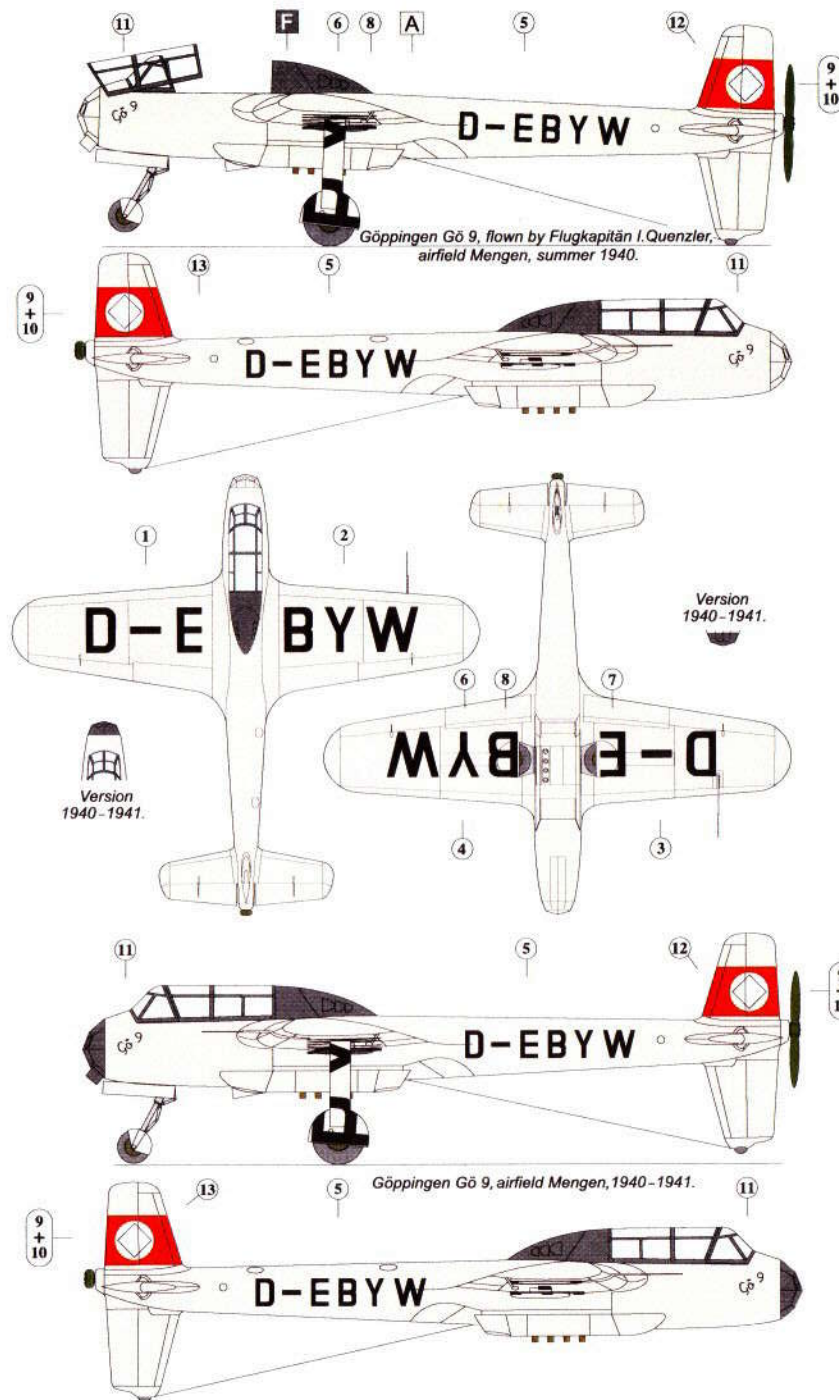

Assembly



Grind	A Cream RLM 05	F Black RLM 22	PUR parts
Optional	B Grey RLM 02	G Rust	
Remove	C Black Green RLM 70	H Coal Black	
To make	D Red RLM 23	I Leather	
Drill	E White RLM 21	J Silver	

