

1/72 SCALE

Spitfire MK Vb



EASY ASSEMBLY AUTHENTIC KIT



cyanoacrylate glue
强力胶



weight
配重



make hole
钻孔



cut / remove
切除



option
选择



no cement
不涂胶水



decal
贴纸



bend
弯曲


The way to apply the decals

1. Cut off the decal from the decal paper and put it into the warm water 40°C for 10 seconds.
2. Take the decal from the water and put it on a piece of clean cloth.
3. Remove the decal slowly from the paper to the targeted location by a wet finger.
4. Use a piece of dry and soft cloth to press it gently on the decal until it getting dry and no bubble existing.


水贴纸的使用方法:

- 一. 把相关的印花从水贴纸上剪下, 放入40°C左右的温水中浸10秒。
- 二. 然后将印花放在干净的布上。
- 三. 拿上印花纸版, 手指蘸水将印花移到适当的位置。
- 四. 用软干布轻压印花直至水干, 气泡消失。



RAF 317 squadron, 1941.

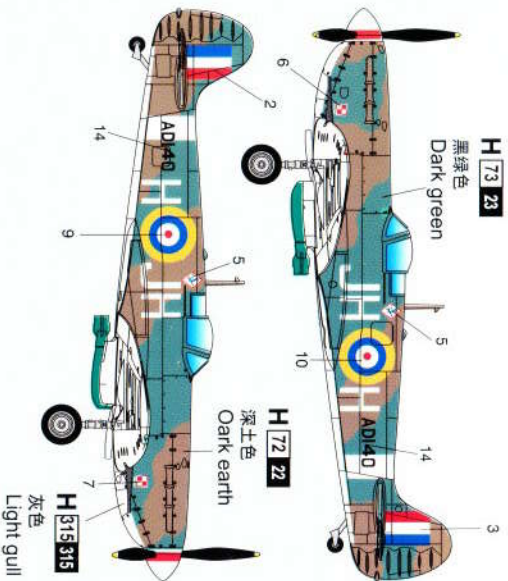

RAF 303 Squadron, 1942.



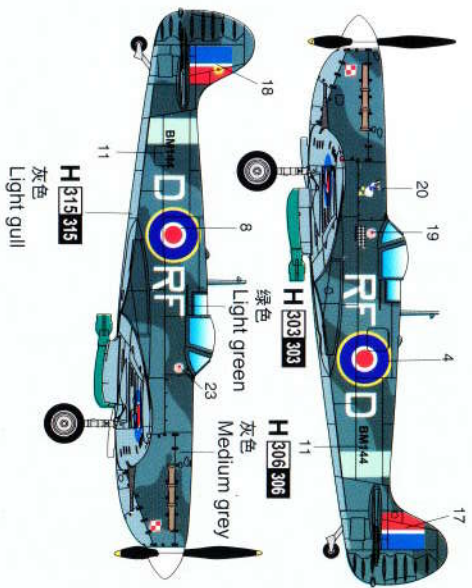


涂装回标贴指示
Painting & Marking guide

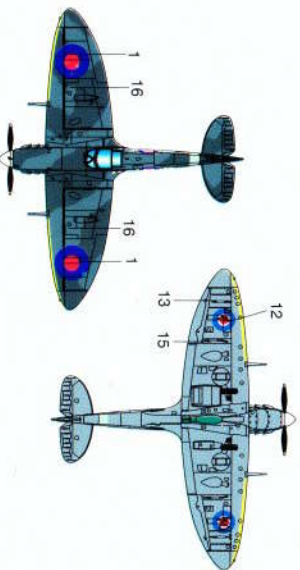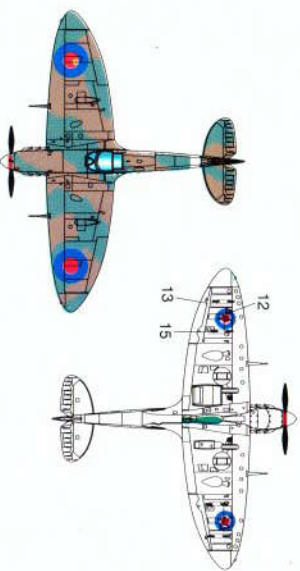


H X GUNZE SANGYO AQUEOUS HOBBY COLOUR X GUNZE SANGYO MR COLOUR

* Some paints may not be available in your country. Please check your local hobby shop for substitute

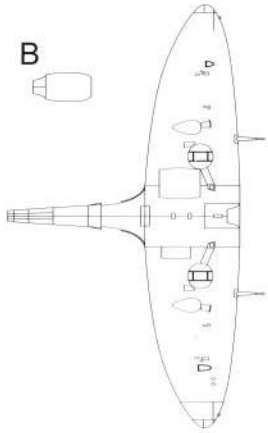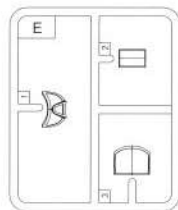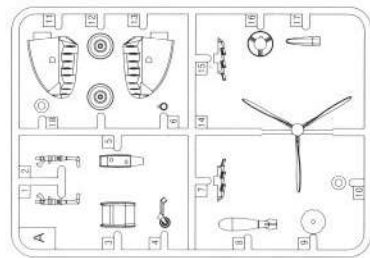


部品图 Parts


1

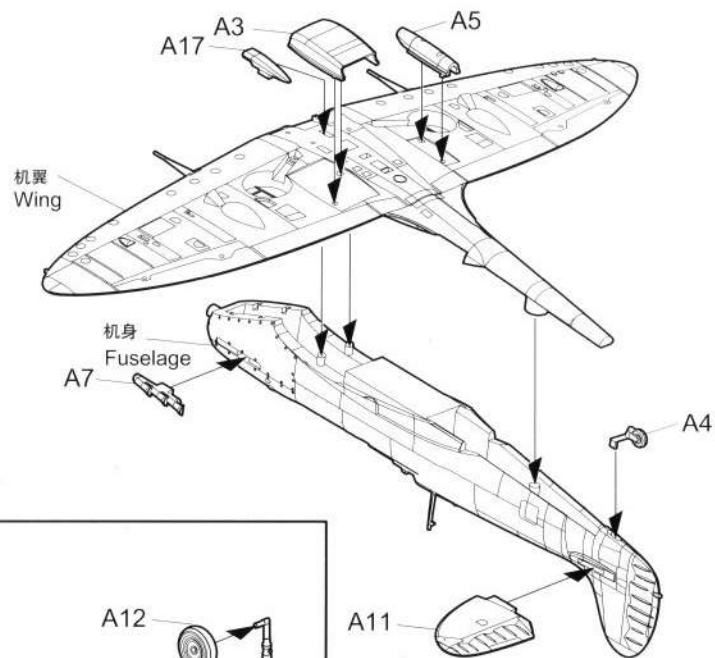


2

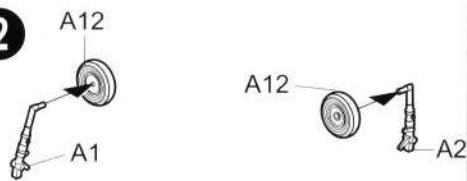


3

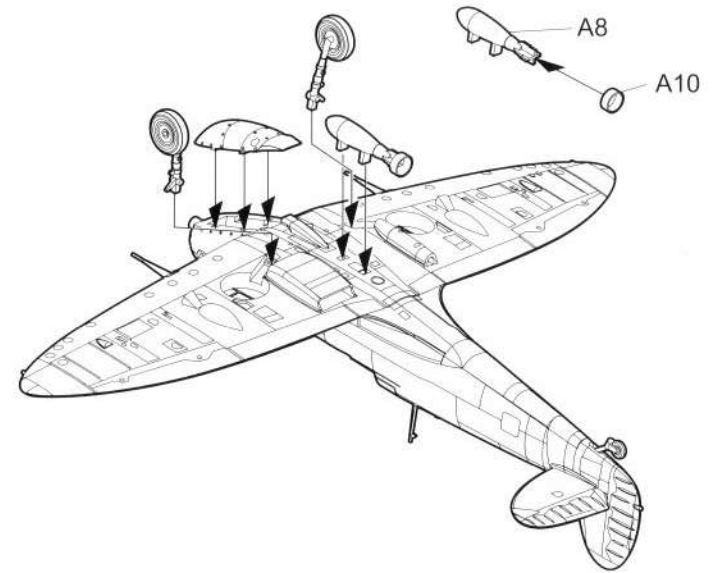


4

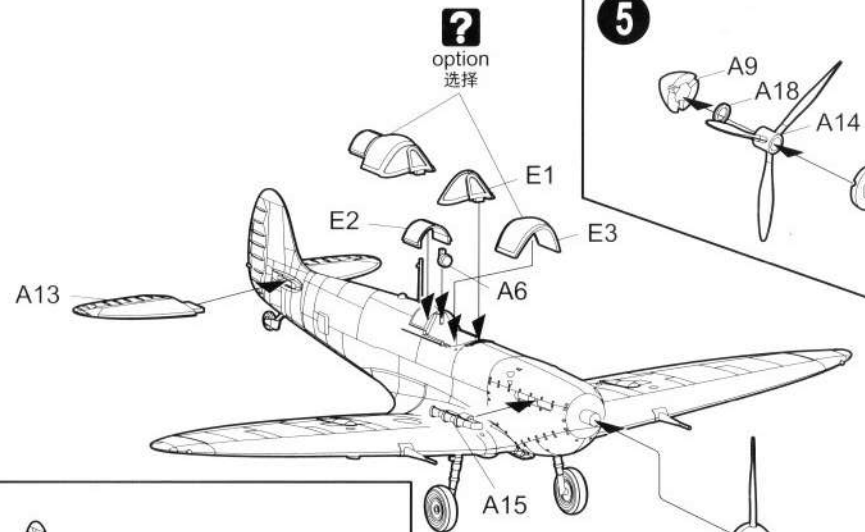

5

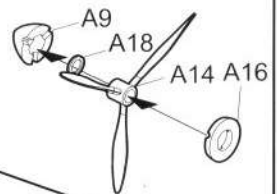

6

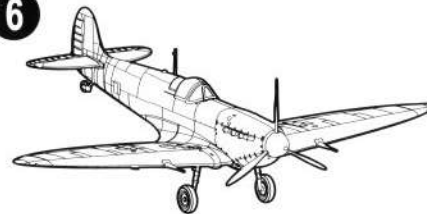



1

9

12

10



ADI40

13

14

ADI40

15



5



6

7

BM144

11

BM144

WHEELS UP WHEN INDICATOR FLUSH

16

WHEELS UP WHEN INDICATOR FLUSH

17



18

4



8



19



20



LOCATION FOR WING TIP STEADYING TRESTLE

LOCATION FOR WING TIP STEADYING TRESTLE

LOCATION FOR WING TIP STEADYING TRESTLE

LOCATION FOR WING TIP STEADYING TRESTLE

WING FORWARD

21

WING REAR

22

23

1/72 80212 SPITFIRE MK Vb