


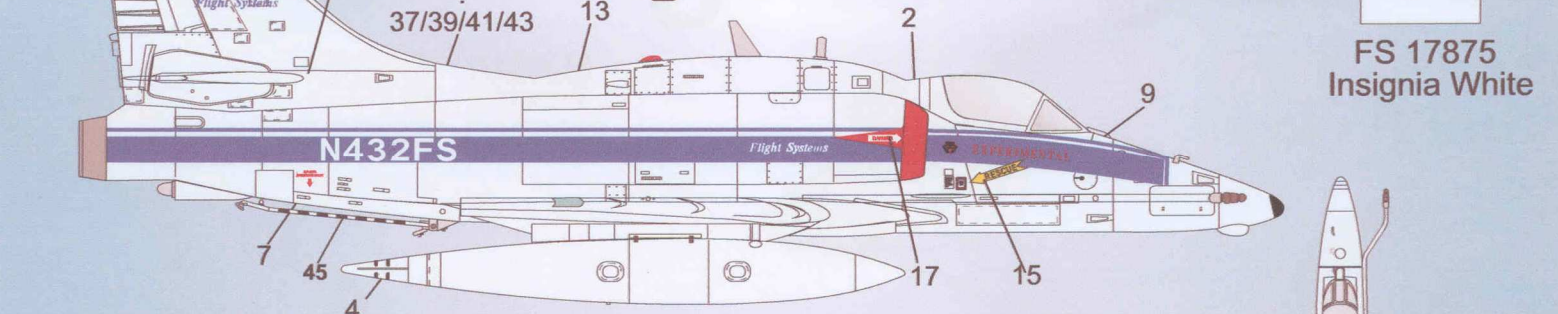
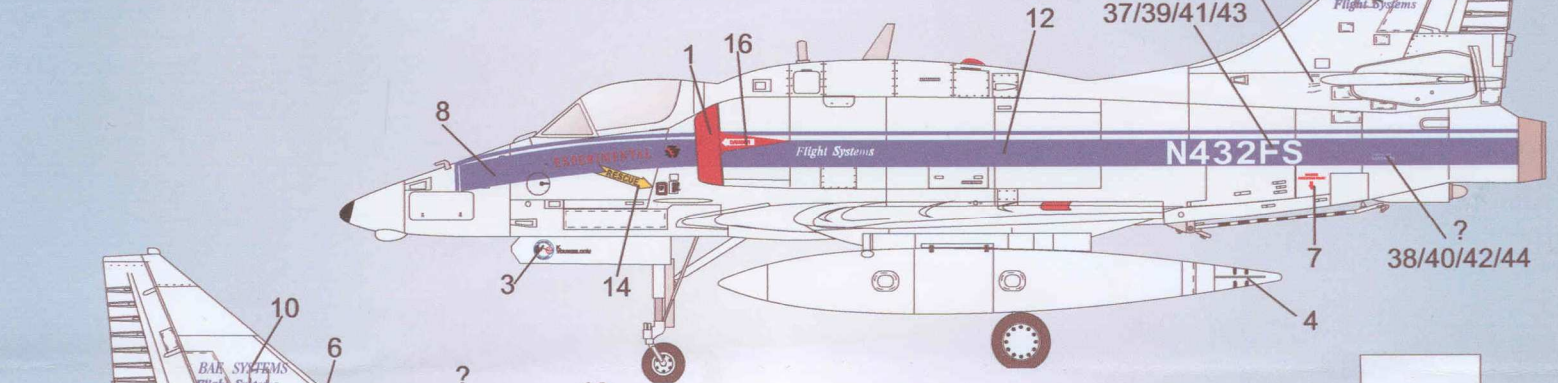
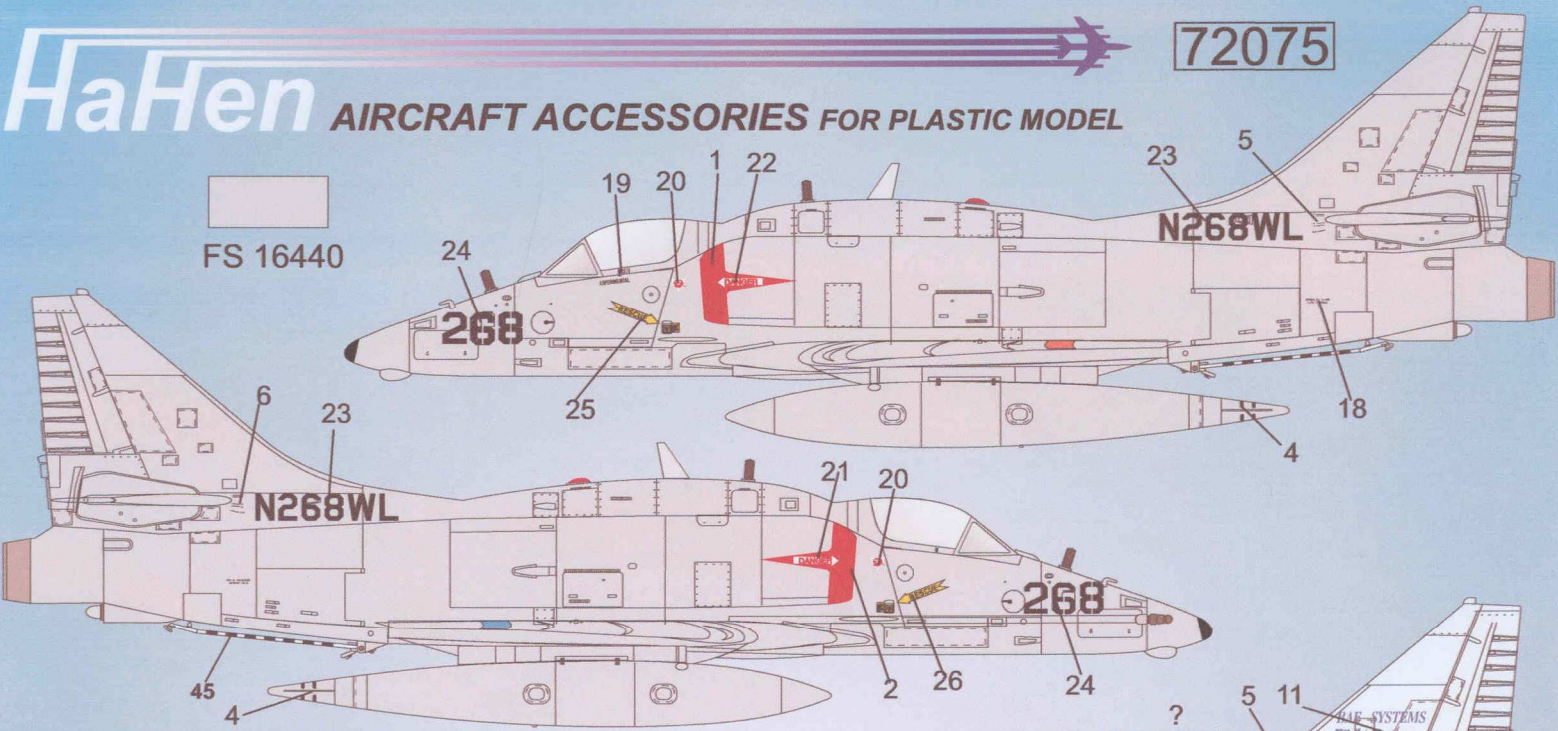


FS 16440

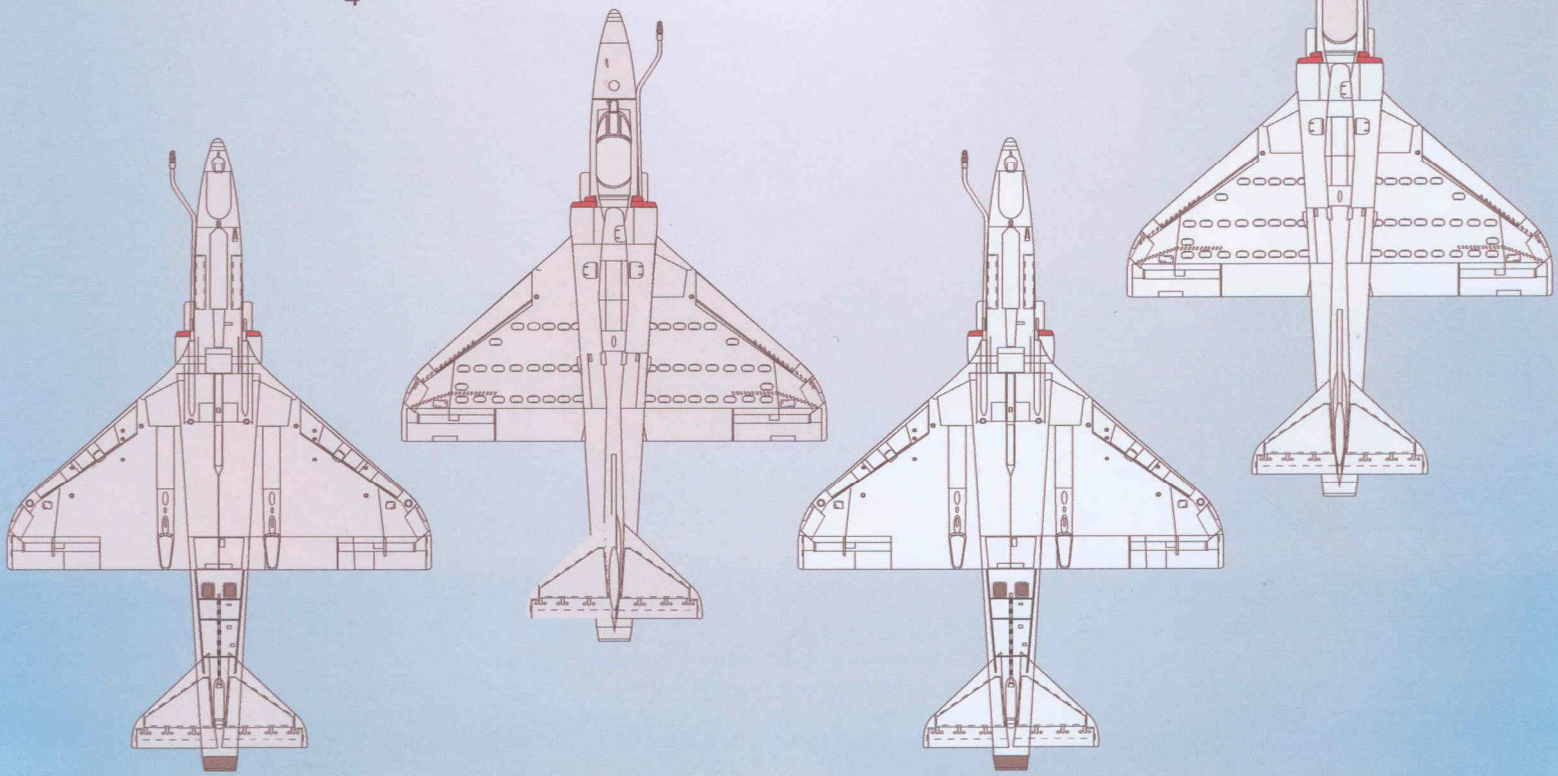


FS 17875
Insignia White

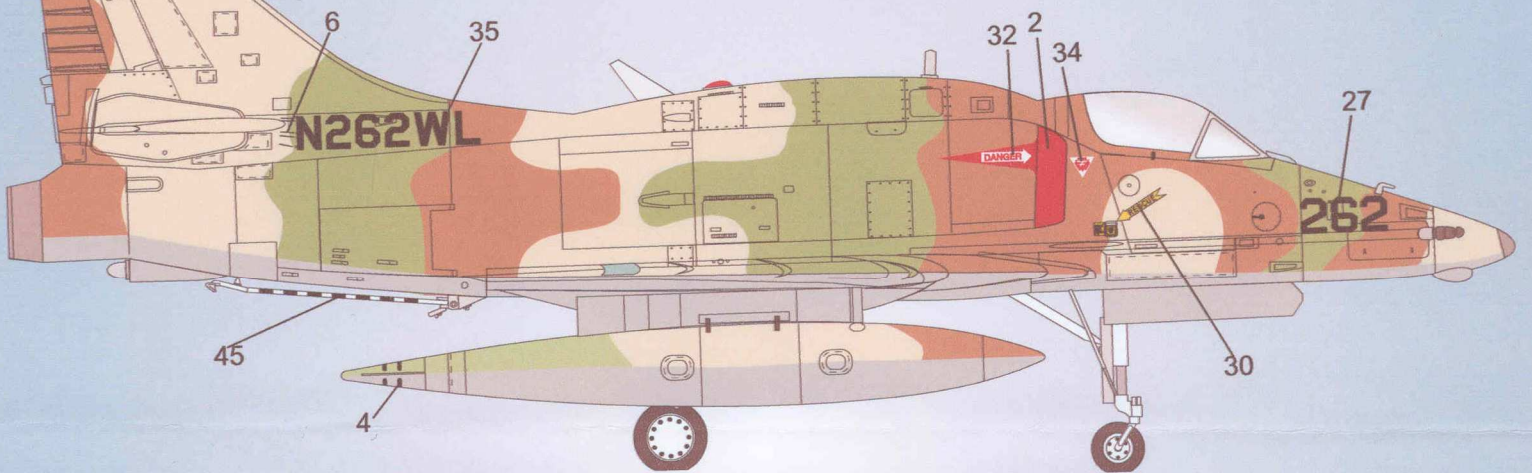

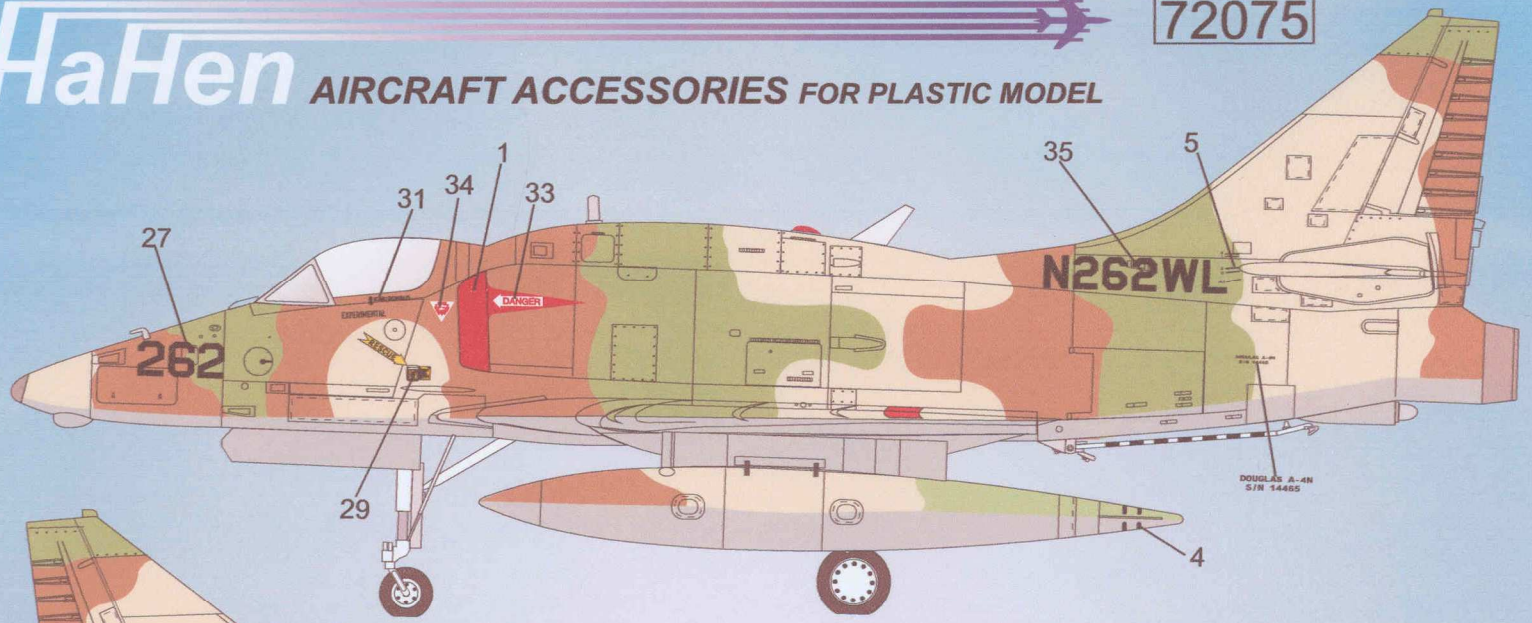

FS 34227 FS 30219

FS 33531 FS 35622

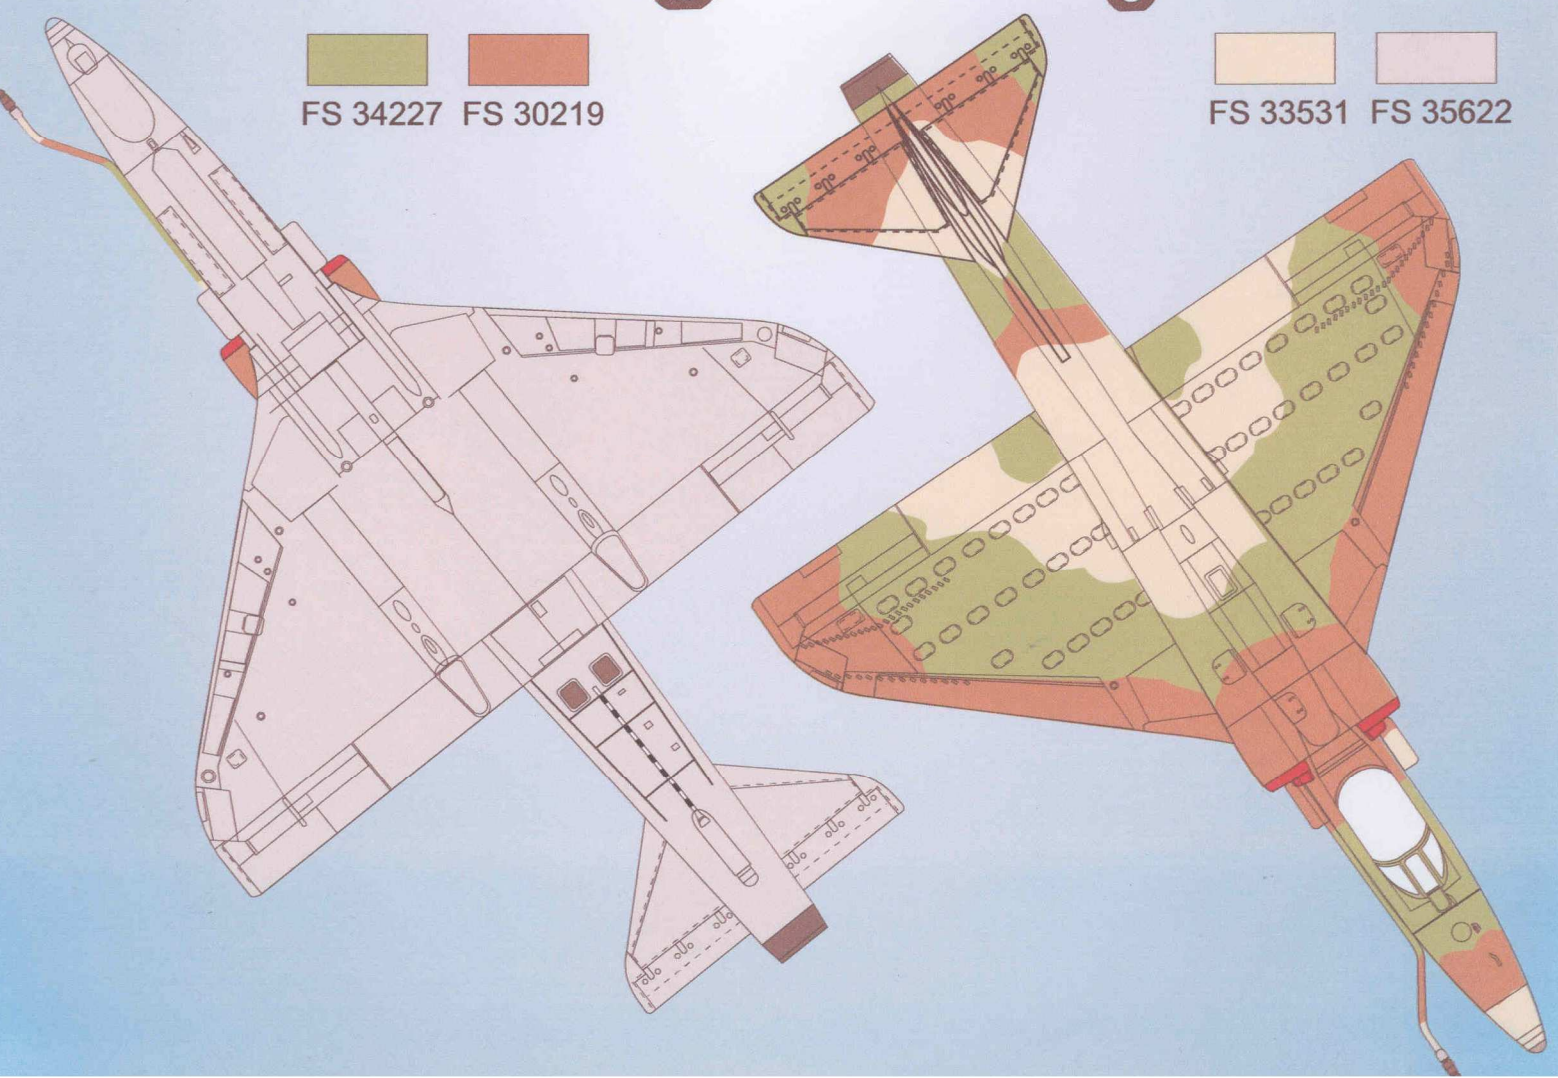

- All of my decals have been sealed by myself to protect them against fingerprints or disolution of the color when soaked with water.
- You do not need any setting solution because the decal film is very thin and flexible. For safety, for example, "Decal Soft" by Revell or "Decal Setting" by Daco can be used.
- When you cut out the decals you should cut as close to the item as possible the edge of the decal film should not be any larger than 0,5 or 1 millimeters.
- When you put the decal into the water it only needs a couple of seconds to soak with water. Then put it away for a minute and then you can easily slide it onto the model kit. If it needs a small correction you can put a drop of water onto the freshly applied decal and move it into the right position.
- Finally you should seal the finished model kit with gloss, semi-gloss or flat varnish.